 
 
4. In the list of available devices, select "MobilePal Keyboard A5.



5. A passcode will appear on your iPad. Enter the displayed passcode with your keyboard and then press the "Enter" key



6. Your keyboard should now be successfully paired with iPad Air 2. Enjoy your bluetooth keyboard



Troubleshooting

If the keyboard is not working properly with your iPad Air 2 or tablet, please check the following

- 1) The Bluetooth function on the iPad is enabled and the iPad is paired with the keyboard.
- 2) The Bluetooth keyboard is within 33 feet of Pad.
- 3) The passkey was entered correctly.

4) Make sure the keyboard is charged. If the battery of the keyboard is low, recharge it.

- 5) If all the above failed, try to restart the iPad. 6) If you pressed the "@" button when the
- keyboard has been connected with the iPad, this will disrupt the established connection, and the keyboard will appear as not connected.
- To resolve this issue, just restart the keyboard by turning it off and then back on.

Product Specifications

Transmit Range: up to 10 meters (33 feet)

Frequency: 2. 4GHz Spectrum
Operating Voltage: 3. 7V DC (powered by Li-ion battery)

Operation Current: <5mA Standby Current: 1. 0mA Sleep Current: <0. 25mA

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

this device may not cause harmful interference, and

this device must accept any interference received. including those that may cause undesired operations.

Warranty Information

MobilePal LLC warrants that this device is free from defects in material and workmanship under normal use for twelve (12) months commencing upon the date of purchase by the first consumer purchaser. Proof of purchase is required for warranty service. The consumer should never attempt to open or disassemble the device, and doing so may cause damage that voids your warranty. This warranty does not apply to devices purchased from unauthorized sellers. During the warranty period, MobilePal will repair or replace any defective devices. Repaired or replaced devices will be warranted for a period equal to the remainder of the original warranty on the original device or for ninety (90) days, whichever is longer. The customer is responsible for the one-way shipping cost to MobilePal

Contact Information

Email: support@mobilepal.us

Toll-free number (US & CA): (800) 299-2599

(please leave voice mail if unattended)

Website: http://www.mobilepal.us

MøbilePal

Bluetooth Keyboard Case for iPad Air 2 **User Guide**



Welcome

Congratulations on your purchase of this wireless Bluetooth keyboard case. This ultra slim keyboard was manufactured with high quality materials to complement iPad Air 2. It is an ideal accessory for your iPad for improved productivity.

Schematic Diagram



Package Contents

- 1x Bluetooth keyboard case
- 1x User Guide
 1x USB charging cable

· Installation and Removal



1) To install, out the iPad Air 2 into the protective case. As shown in (a), press the iPad Air 2 gently on both sides against the case with your thumbs to secure it in the case. 2) To remove iPad Air 2 from the case, As shown in (b), press the cover at two upper corners to release the two tabs securing the iPad. Then proceed to pull the iPad forward and then upward as shown in (c) and (d), respectively.

Using the Stand



. Open the protective case as shown in (e), and then rotate protective case as in (f). 360 degrees rotate (g), and then adjust the rotation axis angle(h).

Keyboard



Overview

- Lock screen · Brightness Virtual Keybo Drightness + 12 Command €3 Delete Copy ■ Volume ⊕ Change Language
- fn-combination key: Press the fn key and another key simultaneously to use the the control keys as shown in blue above.

LED Indicators

Blue LED blinking: Pairing Red LED on: Charging Green LED on: Battery is fully charged Green LED blinking: Low battery

Operating Instructions

Step 1: Charging the Battery

- 1. Before first use, please charge the keyboard for at least 3 hours (or to full charge). After the initial charge, the keyboard should generally take about 2 hours to recharge when the battery power is low.
- 2. The Green LED light will start blinking when the keyboard is low on power. In contrast, the Green LED light remains solid when the keyboard is fully charged.



3. To recharge the keyboard, please connect the keyboard to a compatible 5V/0.5A USB charger using a micro-USB charging cable (included). The keyboard is fully functional while it is being recharging.

Step 2: Pairing Keyboard with your iPad Air 2 or Other Bluetooth-Enabled Device

Before you can use the keyboard with your iPad Air 2, you must first pair the devices together via wireless Bluetooth You only need to perform the pairing process once.

1. Turn on the keyboard and press the " 🛜 " button at the top of the keyboard. The blue LED light should begin blinking

2 Turn on your iPad Air 2 and locate the Settings App



3. Enable the Bluetooth feature if you have not already done so. Your iPad Air 2 should now automatically search for all

